




Not flat



Thin blade
e.g. razor blade, box knife



**Lift the tacky pad
from container**

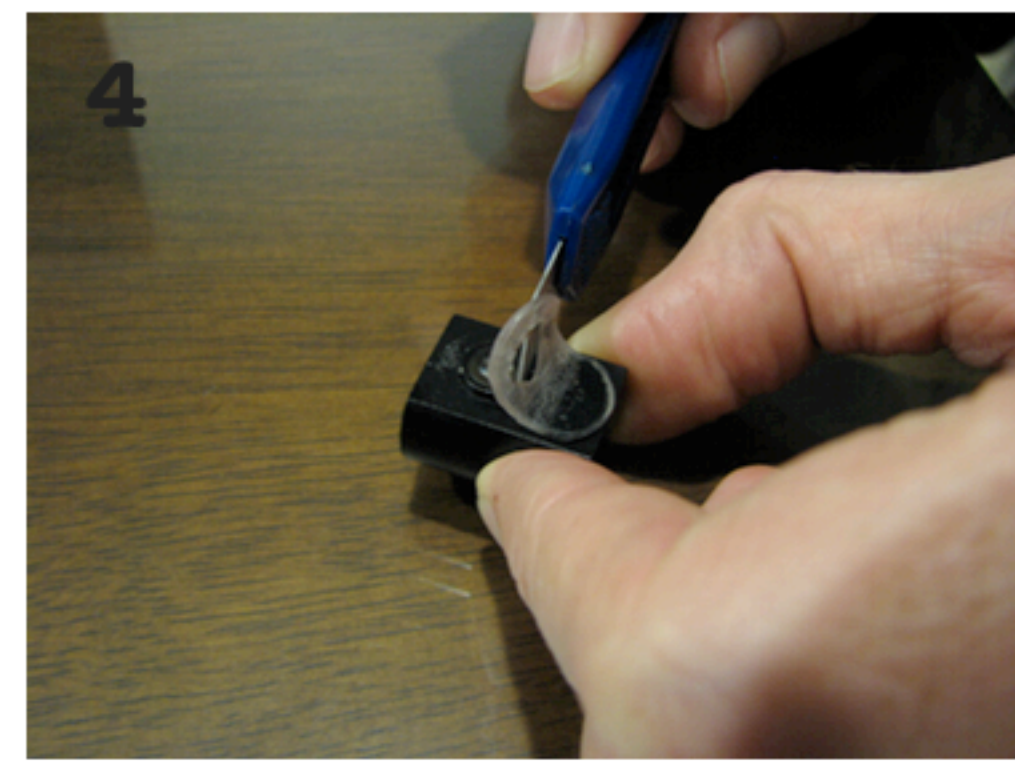

Lift half off



Damp microfiber cloth



First apply pressure near the lens - think flat



Miracle!!